



Digital Audio Wireless System

User Manual

EP-592U

Please read this user manual in detail before use

IMPORTANT NOTE




WARNING

In order to ensure the equipment reliability and the personnel safety, please observe the following during installation, use and maintenance:

- If you find any of the following abnormal conditions during use, please turn off the power immediately, unplug it and quickly contact your sales manager. Please stop using the machine, because it may cause fire or electric shock.
 - If smoke or strange odor is emitted from it
 - If water or metal objects fall into it
 - If it is dropped or the housing is damaged
 - If the wire is damaged (wire core exposed, disconnected, etc.)
- The machine contains high-voltage parts inside. Do not open the cabinet without professionals in order to avoid fire or electric shock. Any questions, please notify sales manager.
- Do not place cups, bowls, vases or other liquid-filled objects on it. Accidental spillage of liquid may cause fire or electric shock.
- Do not expose it to rain or any place that is wet or prone to water, which may cause electric shock or fire.
- Do not put metal, flammable materials or coin through the vents on the cover plate, as this may cause fire or electric shock.
- Do not place heavy objects on it, as the machine may fall and cause personal injury or property damage.
- Make sure the volume is turned down to the lowest before turning on the power, since high volume may damage your hearing.
- Do not continue to use the machine when the sound is distorted. This means malfunctions, which may cause high temperature and fire inside.
- If there is long-term accumulation of dust, please notify your sales manager to clean the machine regularly to avoid damage or fire.
- When replacing the battery, it is required to replace with the product of the same specification and ensure the correct installation to avoid electrical damage and explosion hazard.
- It is a Class III device that must be connected to a power socket with a grounding device to ensure that it is adequately grounded.

- It uses a power plug or appliance input socket as a disconnection device from the mains power supply. For safety, it must be disconnected when necessary.



- It is only suitable for safe use in areas with an altitude of 2000 meters and below.

Precautions

1. Installation environment

To ensure the normal heat dissipation of the host, please avoid poor ventilation, high temperature and direct sunlight during installation.

It is recommended for indoor use. Please place it in a cabinet or other place with good ventilation and heat dissipation. If you use the machine outdoors, please pay attention to waterproof, moisture and lightning protection measures.

Do not use it in places with wireless shielding equipment.

Do not install it in places subject to severe vibration, and do not place other devices on this machine.

2. Avoid electric shock and fire

Do not touch the machine and the power supply with wet hands.

Do not splash liquid on the machine, otherwise it may cause short circuit or fire inside.

Do not place other devices directly on top of the machine.

Non-professional personnel should not disassemble the machine by themselves to avoid damage and electric shock.

3. Transportation

The packaging has undergone shock-proof designs and experiments to ensure that the host will not be damaged accidentally during transportation. It is best to use the original packaging during transportation.

Do not move the host between over-cold and over-heated places to avoid condensation inside, otherwise it will affect the lifespan.

4. Please follow the warning instructions on the machine. These warning signs indicate:

	Only suitable for safe use at an altitude of 2000 meters and below
	Only suitable for safe use in non-tropical climates

5. Agreement


Please strictly follow the instructions in this manual. The software, hardware, and appearance will be constantly upgraded and updated. The above changes will not be notified. The manufacturer reserves the final interpretation right of this product manual.

Non-professional maintenance personnel do not disassemble the machine to avoid damage and electric shock.

Content

1. Product Description.....	- 1 -
2. Product Features.....	- 1 -
3. Functional introduction of each part.....	- 2 -
3.1. RECEIVER FRONT/REAR PANEL.....	- 2 -
4. Operating Instructions.....	- 3 -
4.1. STARTUP AND SHUTDOWN.....	- 3 -
4.2. MAIN PAGE AND SECONDARY PAGE.....	- 3 -
4.3. RF AND AF.....	- 4 -
4.4. FREQUENCY.....	- 5 -
4.5. VOLUME.....	- 5 -
4.6. MICROPHONE AND BATTERY LEVEL MARKS.....	- 5 -
4.7. FREQUENCY SCANNING.....	- 5 -
4.8. SETTING.....	- 5 -
4.9. REVERB.....	- 5 -
4.10. BALANCE.....	- 5 -
4.11. TRANSMIT POWER.....	- 6 -
4.12. SMART MUTE.....	- 6 -
4.13. AUDIO ENCRYPTION.....	- 6 -
4.14. ONE-BUTTON MUTE.....	- 6 -
4.15. FREQUENCY PAIRING REMINDER.....	- 6 -
5. Product Specifications.....	- 7 -
6. Management requirements for micropower radio transmitting equipment.....	- 8 -

1.Product Description

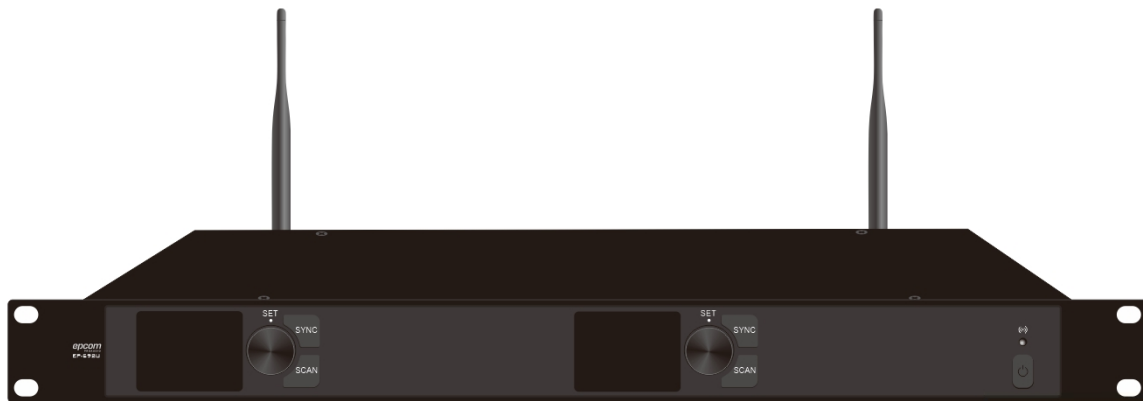


It is a digital wireless microphone system with a new solution architecture. The system adopts unique digital U-band transmission technology, pi/4-DQPSK modulation mode, and uses ID code pilot technology to prevent cross-frequency interference, and frequency scanning to avoid interference, characterized by low bit error rate, stable transmission, and strong anti-interference ability. It can be widely used in conferences, training, teaching, KTV, public broadcasting, wedding and other places.

2.Product Features

1. Adopt unique digital U-band transmission technology, pi/4-DQPSK modulation mode, featuring strong anti-interference ability, low bit error rate and stable transmission.
2. A unique encryption method is used for audio transmission to ensure the security of meeting content.
3. Adopt unique ID code pilot technology to prevent cross-frequency interference.
4. Using high-reduction dynamic microphone core, professional sound cavity design, it presents natural and original sound quality.
5. One-key frequency scanning to avoid interference; one-key IR frequency paring, easy to operate.
6. Support reverb, treble/alto/bass adjustment.
7. Designed with two balanced outputs and one unbalanced mixing output.
8. The receiver panel is made of exquisite craftsmanship, neat and beautiful.
9. The receiver uses a 2.2-inch TFT-LCD screen, realizing more delicate display effect.

3.Functional introduction of each part

3.1.Receiver Front/Rear Panel

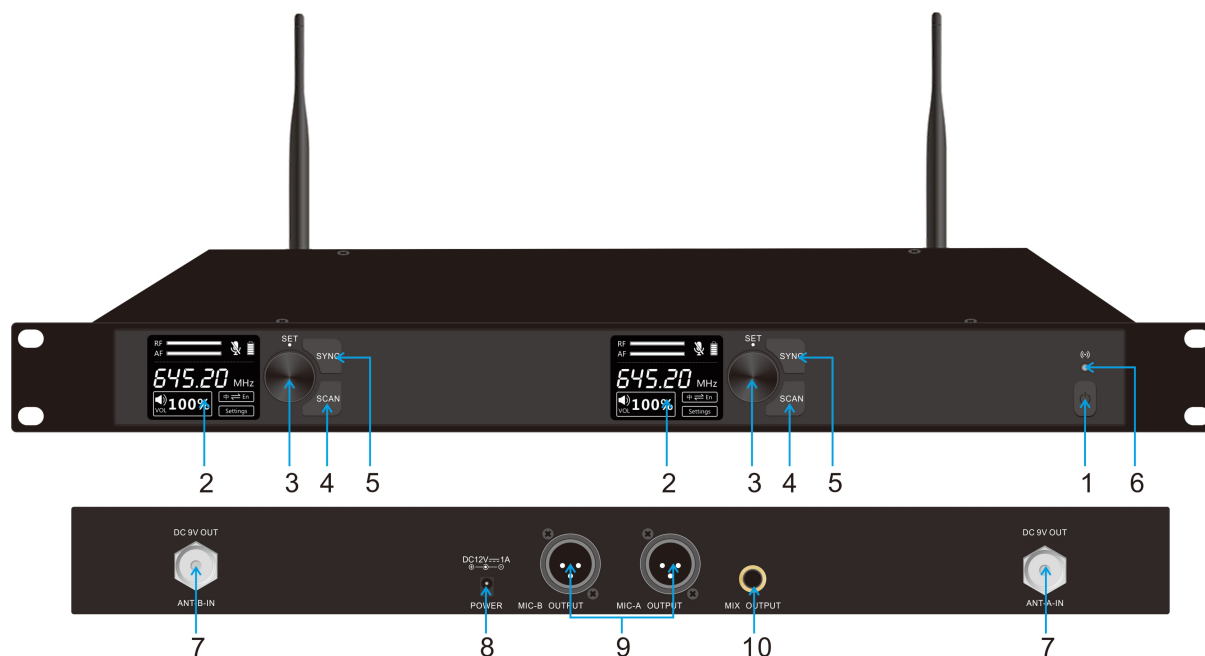

1. **Power switch:** Press and hold the button to switch the receiver on and off.
2. **LCD display:** Used to display the working status of the system.
3. **SET button:** Press and hold the SET button to lock and unlock the screen. When the screen is locked, press other buttons, there will be a prompt saying "Locked, please press and hold the SET button to unlock". Short press the SET button when the screen is unlocked, and a white cursor will appear under the related options that can be set. The cursor includes a static state and a flashing state. In the static state, the relevant options can be switched through the knob. At this time, to short press the SET key is to confirm the option. When the cursor is flashing, the current relevant parameters can be adjusted through the knob.
4. **SCAN frequency scanning button:** Press the SCAN button to adjust the current frequency, and the adjusted result will be allocated according to the current frequency with less interference.
5. **SYNC IR frequency paring button:** After pressing the SYNC button, the IR light of the receiver will flash. When the IR light is flashing, you can put the IR receiving port of the handheld microphone close to the IR light to complete the frequency paring operation.
6. **IR emission indicator:** Used for frequency paring with the handheld microphone.
7. **ANT-A-IN and ANT-B-IN:** Antenna terminals, used to access antennas.
8. **POWER:** DC 12V/1A power input port.

9. **MIC-A OUTPUT and MIC-B OUTPUT:** Balanced output ports, connected to sound reinforcement devices.
10. **MIX OUTPUT:** Unbalanced output port, connected to sound reinforcement devices.

4. Operating Instructions

4.1. Startup and shutdown

In the power off state, press and hold the switch to turn on the power, the display will display "POWER ON", and then it can work normally; in the power on state, press and hold the switch to turn off, the display will display "POWER OFF", and the screen will turn off after letting go. The specific effect is shown in Figure 4-1 and Figure 4-2 below:



Fig. 4 -1 Receiver Power On Page



Fig. 4 -2 Receiver Power Off Page

4.2. Main page and secondary page

The main page mainly displays: RF signal strength, AF language signal size, microphone status (On/Off), handheld microphone battery status, current frequency value, volume level, Settings option. Through the Settings option, we can access the secondary page, which mainly displays the parameter settings of reverb (ratio, delay, level), equalization setting, transmit power setting, Smart Mute setting, One-button Mute, audio encryption setting, Chinese and English switching, and Return option. Switching between the main page and the secondary page can be done via the Settings option and the Return option. The specific effect is shown in the figures below:

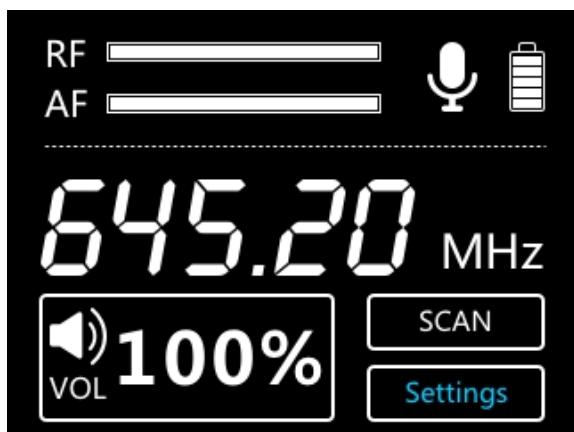


Fig. 4-3 Main page

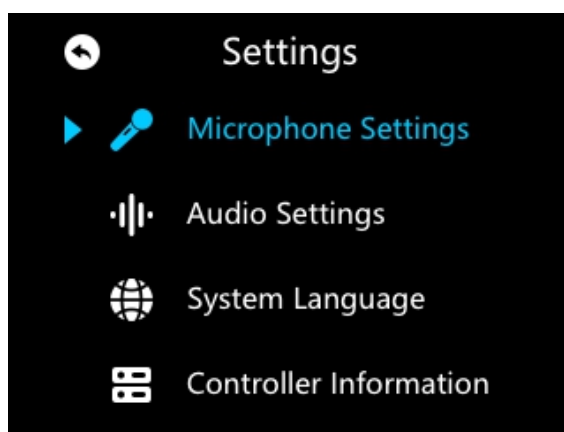


Fig. 4-4 Secondary page

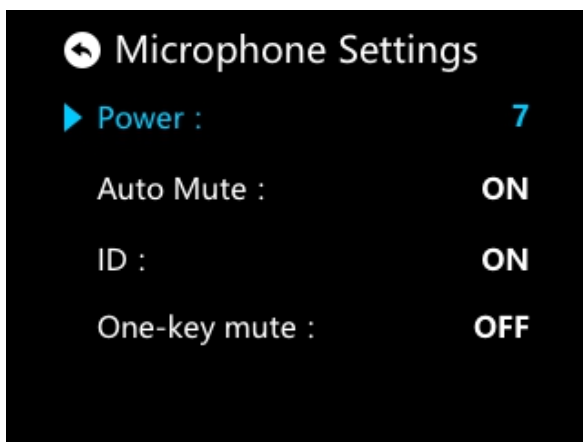


Fig. 4-5 Secondary page

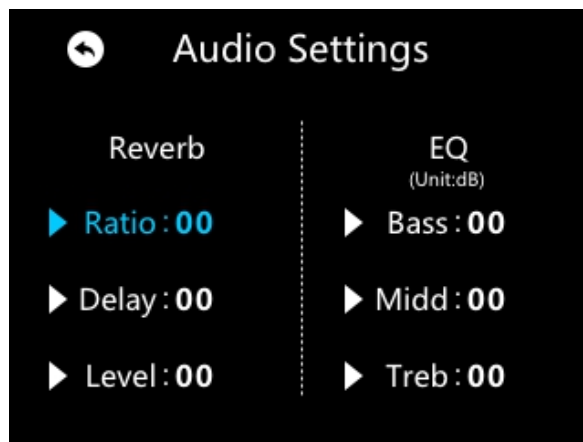


Fig. 4-6 Secondary page



Fig. 4-7 Secondary page

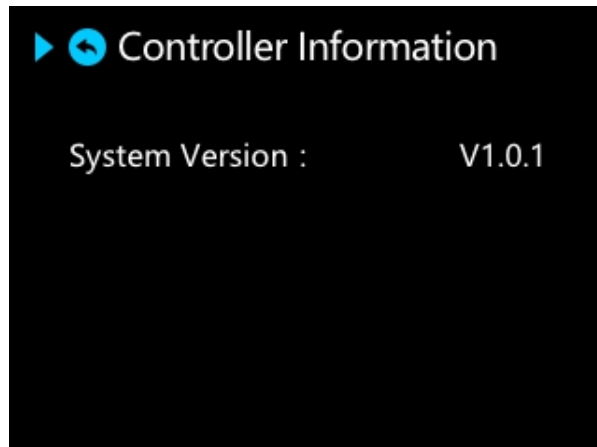


Fig. 4-8 Secondary page

4.3.RF and AF

The RF and AF white bar marks at the top of the home page of the receiver indicate the real-time status of RF and AF. RF means the signal strength of the current direct communication between the transmitter and the receiver, and AF means the volume level of the input sound from current microphone.

4.4.Frequency

The numerical mark on the home page of the receiver represents the frequency of the receiver, which is the frequency value of the current receiver. If the transmitter is not connected to the receiver, it needs to perform infrared frequency pairing for connection. After successful connection, the frequency of the transmitter and that of the receiver will be displayed as consistent. The frequency range supports 470-510MHz, 540MHz-590MHz, 640MHz-690MHz and 807MHz-830MHz adjustable.

4.5.Volume

The volume mark on the home page of the receiver indicates the current volume of the receiver. The higher the volume, the higher the output volume. The volume can be adjusted manually, with adjustment range from zero to 100%.

4.6.Microphone and battery level marks

The microphone and battery logo on the home page of the receiver indicate the working status and battery power of the transmitter. The microphone logo lights up to indicate that the transmitter can be used normally, and the battery power logo shows the battery power of the transmitter currently connected to the receiver.

4.7.Frequency Scanning

Start scanning from the current frequency and automatically adjust to a clean frequency subject to less interference.

4.8.Setting

Through the Settings option, we can access the secondary page.

4.9.Reverb

By adjusting the ratio, delay, and level, different sound effects can be achieved.

4.10.Balance

The low frequency, medium frequency and high frequency can be adjusted by $\pm 6\text{dB}$ respectively.

4.11. Transmit Power

The intensity of the transmit power can be adjusted.

4.12. Smart Mute

The Smart Mute mode can be turned on or off. When Smart Mute is turned on, it will automatically mute after 5 seconds of resting. The handheld microphone will automatically mute in the event of accidents such as falling or throwing. Please note that the waistpack transmitter has no such function.

4.13. Audio Encryption

The current audio encryption can be turned on or off. The encrypted audio will be more stable, with enhanced anti-interference ability.

4.14. One-button Mute

After One-button Mute is turned on, the receiver automatically emits infrared frequency, and it will take effect after infrared reception of the handheld mic. After that, when One-button Mute is turned on, the handheld microphone needs to be pressed twice to enter or exit the mute state; When One-button Mute is turned off, the handheld microphone does not enter the mute state after double-clicking.

4.15. Frequency pairing reminder

After adjusting the transmit power, Smart Mute, and audio encryption, frequency re-pairing is required for this feature to take effect. A prompt will be displayed every time the transmit power, Smart Mute, and audio encryption are adjusted.

5.Product Specifications


Model	EP-592U
Frequency range	470MHz-510MHz、 540MHz-590MHz、 640MHz-690MHz、 807MHz-830MHz
Modulation mode	pi/4-DQPSK
Frequency response	20Hz~20kHz (± 3 dB)
SNR	≥ 105 dB (XLR)
THD+N	<0.1%
Antenna interface	BNC/50 Ω
Receiver sensitivity	<-95dBm
Maximum output	Balanced output 500mV, unbalanced output 1000mV
Power supply	DC 12V/1A
Working current	≤ 320 mA
Dimension (L*W*H)	482.6 $\times$ 212 $\times$ 44mm
Weight	2.225kg

6.Management requirements for micropower radio transmitting equipment

Micropower radio transmitting equipment shall comply with the following regulations:

- 1.Comply with the specific terms and usage scenarios of the "Micropower Short-Distance Radio Transmitting Equipment Catalog and Technical Requirements", and usage methods such as control, adjustment and switching;
- 2.No unauthorized changes of use scenes, expansion of transmission frequency range, increase of transmission power (including additional installation of radio frequency power amplifiers), no unauthorized external antenna or change to other transmission antennas;
- 3.Shall not cause harmful interference to other lawful radio stations or propose any protection from harmful interference;
- 4.Shall be subject to interference from equipment for industrial, scientific and medical (ISM) applications radiating radio frequency energy or from other lawful radio stations.
- 5.If it causes harmful interference to other lawful radio stations, discontinue use immediately and take measures to eliminate the interference before further use;
- 6.For the use of micropower equipment in aircraft and in electromagnetic environmental protection areas such as airports, radio observatories, meteorological radar stations, satellite earth stations (including measurement and control, ranging, receiving and navigation stations), which are designated in accordance with laws, regulations and standards, the regulations of electromagnetic environmental protection and the competent authorities of the relevant industries shall be complied with;
- 7.It is prohibited to use any kinds of model remote controllers in an area with a radius of 5,000 meters around the center point of the airport runway;
- 8.Environmental conditions of temperature and voltage when micropower devices are used.

Digital Audio Wireless System

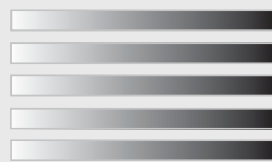

epcom
PROAUDIO